



## Nori® Hamster IL-1 $\beta$ ELISA Kit DataSheet

Interleukin-1 beta (IL-1 $\beta$ ) also known as catabolin, is a member of the interleukin 1 cytokine family. IL-1 $\beta$  precursor is cleaved by caspase 1 (interleukin 1 beta convertase). Cytosolic thiol protease cleaves the product to form mature IL-1 $\beta$ . Interleukin-1 alpha and interleukin-1 beta forms IL-1 (1,2,3). IL-1 $\beta$  is produced by activated macrophages as a proprotein, which is proteolytically processed to its active form by caspase 1 (CASPI/ICE). This cytokine is an important mediator of the inflammatory response, and is involved in a variety of cellular activities, including cell proliferation, differentiation, and apoptosis. The induction of cyclooxygenase-2 (PTGS2/COX2) by this cytokine in the central nervous system (CNS) is found to contribute to inflammatory pain hypersensitivity. IL-1 $\beta$  gene and eight other interleukin 1 family genes form a cytokine gene cluster on chromosome 2(4).

### References

1. Auron PE, et al (1984). Proc Natl Acad Sci U S A 81 (24): 7907–11.
2. March CJ, et al. (1985). Nature 315 (6021): 641–7.
3. Clark BD, et al (1986). Nucleic Acids Res 14 (20): 7897–1914.

### PRINCIPLE OF THE ASSAY

This ELISA kit is for quantification of IL-1 $\beta$  in hamster. This is a quick ELISA assay that reduces time to 50% compared to the conventional method, and the entire assay only takes 3 hours. This assay employs the quantitative sandwich enzyme immunoassay technique and uses biotin-streptavidin chemistry to improve the performance of the assays. An antibody specific for IL-1 $\beta$  has been pre-coated onto a microplate. Standards and samples are pipetted into the wells and any IL-1 $\beta$  present is bound by the immobilized antibody. After washing away any unbound substances, a detection antibody specific for IL-1 $\beta$  is added to the wells. Following wash to remove any unbound antibody reagent, a detection reagent is added. After intensive wash a substrate solution is added to the wells and color develops in proportion to the amount of IL-1 $\beta$  bound in the initial step. The color development is stopped, and the intensity of the color is measured.

This package insert must be read in its entirety before using this product.

### Storage

Store at 4 °C. The kit can be used in 6 months.



## Nori® Hamster IL-1 $\beta$ ELISA Kit DataSheet

### MATERIALS PROVIDED

Description	Quantity	Description	Quantity	Description	Quantity
Antibody Precoated Plate	1	20 x PBS	1	Substrate Solution	1
Detection Antibody	1	20 x Assay Buffer	1	Stop Solution	1
HRP Conjugate	1	Reagent Diluent	1	DataSheet	1
Standard	3	MSDS/CoA	1	96-well plate sheet	1

Bring all reagents to room temperature before use.

### Reagent Preparations

**Hamster IL-1 $\beta$  Detection Antibody** (1 vial) – The lyophilized Detection Antibody should be stored at 4°C to -20°C in a manual defrost freezer for up to 6 months, if not used immediately. Spin to bring down the material prior to open the vial. The vial contains sufficient Detection Antibody for a 96-well plate. Add 200  $\mu$ L of sterile 1 x PBS, Vortex 30 sec and allow it to sit for 5 min prior to use. Take the entire 200  $\mu$ L of detection antibody to 10.5 mL of Reagent Diluent to make **working dilution of Detection Antibody** and vortex 30 sec if the entire 96-well plate is used. If the partial antibody is used store the rest at -20° C until use.

**Hamster IL-1 $\beta$  Standard** (3 vials) – The lyophilized Hamster IL-1 $\beta$  Standard has a total of 3 vials. Each vial contains the standard sufficient for generating a standard curve. The unreconstituted standard can be stored at -20° C for up to 6 months if not used immediately. Spin to bring down the material prior to open the tube. Add 500  $\mu$ L of 1 x Assay Buffer to a Standard vial to make the high standard concentration of 2000 pg/ml. **Vortex 1 min** and allow it to sit for 5 min prior to use. A seven-point standard curve is generated using 2-fold serial dilutions in 1 x Assay Buffer, **vortex 30 sec** for each of dilution step.

**HRP Conjugate** (53  $\mu$ l) – Centrifuge for 1 min at 6000 x g to bring down the material prior to open the vial. The vial contains 53  $\mu$ L HRP Conjugate sufficient for one 96-well plate. If the volume is less than 53  $\mu$ L, add sterile 1 x PBS to reach 53  $\mu$ L and vortex 10 sec. Make 1:200 dilutions in Reagent Diluent. If the entire 96-well plate is used, add 53  $\mu$ L of HRP Conjugate to 10.5 mL of Reagent Diluent to make **working dilution of HRP Conjugate** and vortex 30 sec prior to the assay. The rest of undiluted HRP Conjugate can be stored at 4°C for up to 6 months. **DO NOT FREEZE.**

**20 x PBS**, pH 7.3, 25 mL- Dilute to 1 x PBS with deionized distilled water and mix well prior to use.

**20 x Assay Buffer**, 20 mL- Dilute to 1 x Assay Buffer with 1 x PBS prior to use.

**Reagent Diluent**, 21 mL.

**Substrate Solution**, 10.5 mL.

**Stop Solution**, 5.5 mL.



## Nori® Hamster IL-1 $\beta$ ELISA Kit DataSheet

### Assay Procedure

1. Lift the plate cover from the top left and cover the wells that are not used. **Vortex the standards and samples for 10 sec** before applying to the plate. Add 100  $\mu$ L of **diluted sample** (see below) or **standard** per well and use duplicate wells for each standard or sample. Cover the 96-well plate and incubate 1 hour at room temperature. Attention: **MUST vortex standards and samples for 10 sec before pipetting to the wells!**
2. Aspirate each well and wash with **1 x Assay Buffer**, repeating the process one time for a total of two washes. Wash by filling each well with 1 x Assay Buffer (300  $\mu$ L) using a multi-channel pipette, manifold dispenser or auto-washer. Complete removal of liquid at each step is essential for good performance. After the last wash, remove any remaining Assay Buffer by aspirating or by inverting the plate and blotting it against clean paper towels.
3. Add 100  $\mu$ L of the **working dilution of Detection Antibody** to each well. Cover the plate and incubate 1 hour at room temperature.
4. Repeat the aspiration/wash as in step 2.
5. Add 100  $\mu$ L of the **working dilution of HRP Conjugate** to each well. Cover the plate and incubate for 20 minutes at room temperature. Avoid placing the plate in direct light.
6. Repeat the aspiration/wash as in step 2.
7. Add 100  $\mu$ L of **Substrate Solution** to each well. Incubate for up to 20 minutes (**depending on signal**) at room. Over incubation of the substrate will result in over flow of high standard and thus should be avoided. Avoid placing the plate in direct light.
8. Add 50  $\mu$ L of **Stop Solution** to each well. Gently tap the plate to ensure thorough mixing.
9. Determine the optical density of each well immediately, using a microplate reader set to 450 nm. If wavelength correction is available, set to 540 nm or 570 nm. If wavelength correction is not available, subtract readings at 540 nm or 570 nm from the readings at 450 nm. This subtraction will correct for optical imperfections in the plate. Readings made directly at 450 nm without correction may be higher and less accurate.

**Sample dilution:** Samples should be diluted with four volumes of 1 x Assay Buffer and **vortex for 1 min** prior to assay. If the OD value still exceeds the upper limit of the standard curve, further dilution is recommended till it falls in the detection range and the dilution factor must be used for calculation of the concentration.

### **Precaution and Technical Notes**

1. It is critical to follow the procedure step by step otherwise appropriate color development may not occur as expected.
2. A standard curve should be generated for each set of samples assayed. Thorough mixing of standards at each of dilution steps is critical to acquire a normal standard curve and **vortex again (10 sec) before pipetting to the 96-well plate.**
3. HRP Conjugate contains enzyme, DO NOT mass up with Detection Antibody.
4. The Stop Solution is an acid solution, handle with caution.
5. This kit should not be used beyond the expiration date on the label.
6. A thorough and consistent wash technique is essential for proper assay performance.
7. Use a fresh reagent reservoir and pipette tips for each step.
8. It is recommended that all standards and samples be assayed in duplicate.
9. Avoid microbial contamination of reagents and buffers. This may interfere with the sensitivity of the assay.



## Nori® Hamster IL-1 $\beta$ ELISA Kit DataSheet


### Calculation of Results

Average the duplicate readings for each standard, control, and sample and subtract the average zero (blank) standard optical density.

Create a standard curve by reducing the data using computer software capable of generating a four-parameter logistic (4-PL) curve-fit. As an alternative, construct a standard curve by plotting the mean absorbance for each standard on the y-axis against the concentration on the x-axis and draw a best fit curve through the points on the graph. The data may be linearized by plotting the log of the IL-1 $\beta$  concentrations versus the log of the O.D. and the best fit line can be determined by regression analysis. This procedure will produce an adequate but less precise fit of the data. If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.

### The Standard Curve

The graph below represents typical data generated when using this Hamster IL-1 $\beta$  ELISA Kit. The standard curve was calculated using a computer generated 4-PL curve-fit. For this case, a Bio-Rad iMark™ Microplate Reader and a Microplate Manager 6 Software were used to generate this curve. The correlation coefficient ( $r^2$ ) is 0.999-1.000.

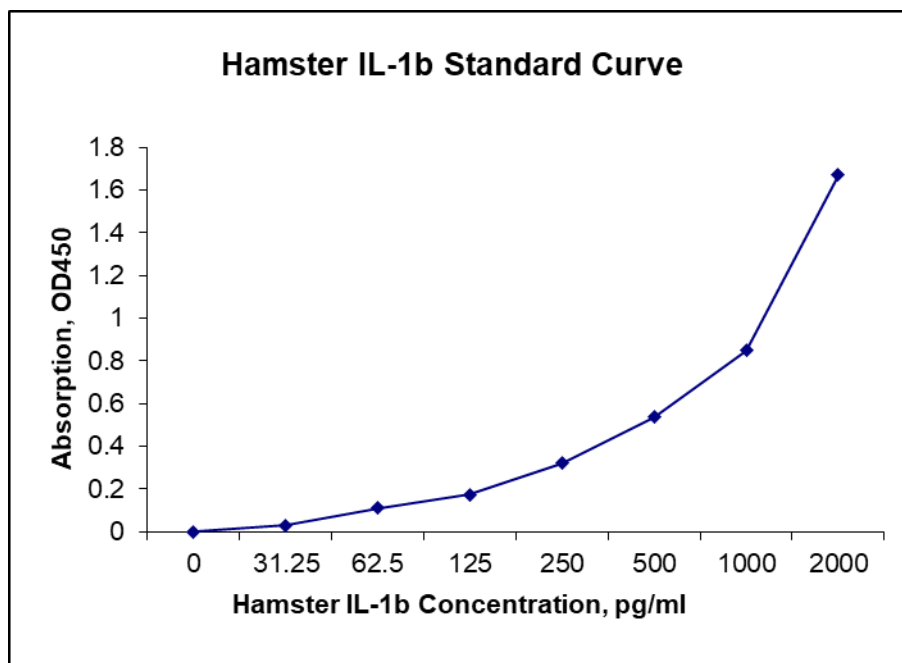



## Nori® Hamster IL-1 $\beta$ ELISA Kit- Plasma/Serum DataSheet

### Specificity

The following recombinant Hamster proteins prepared at 10 ng/ml were tested and exhibited no cross-reactivity or interference.

Adiponectin, ApoAI, BMP1, BMP2, BMP3, BMP4, BMP5, BMP7, CCL2, CCL4, CCL5, CRP, HGF, HSP27, IL-1RA, IL-1 $\alpha$ , IL-1 RI, IL-2, IL-4, IL-5, IL-6, IL-6R, IL-8, IL-10, IL-12, IL-13, IL-15, IL-17C, IL-21, IL-23, IFN $\beta$ , IFN- $\gamma$ , PDGF, PLA2G7, prolactin, serpin E1, TGF $\beta$ 1, TGF $\beta$ 2, TGF $\beta$ 3, TLR1, TLR2, TL3, TLR9, TNF- $\alpha$ , TNF RI, TNF RII, VEGF, VEGF R1.

### Calibration

This kit is calibrated against a highly purified yeast-expressed recombinant Hamster IL-1 $\beta$ .

### Detection Range

31-2000 pg/ml

### Assay Sensitivity

6 pg/ml

### Assay Precision

Intra-Assay %CV: 7; Inter-Assay %CV: 10

## For Research Use Only

### Related products

10 x ELISA Assay Buffer, GR103014

10 x Reagent Diluent, GR103028

20 x PBS, GR103004-20

ELISA Substrate, GR103021

ELISA Stop Solution, GR103055

ELISA Conjugate, GR103044

Hamster IL-1 $\beta$  standard

Hamster IL-1 $\beta$  detection antibody

## Nori® Hamster IL-1 $\beta$ ELISA Kit- Plasma/Serum DataSheet

### Troubleshooting Guide

Problem	Possible causes	Solution
Poor standard curve	<ul style="list-style-type: none"> <li>• Inaccurate pipetting</li> <li>• Improper standard curve</li> <li>• OD<sub>450</sub> too high for the high standard point</li> </ul>	<ul style="list-style-type: none"> <li>• Check pipettes</li> <li>• Check and use the correct dilution buffer</li> <li>• Vortex 30 sec for each of standard dilution steps and <b>vortex again (10 sec) before pipetting to the 96-well plate.</b></li> <li>• Reduce substrate incubation time</li> </ul>
Low signal	<ul style="list-style-type: none"> <li>• Improper preparation of standard, samples, detection antibody, and/or HRP Conjugate</li> <li>• Too brief incubation times</li> <li>• Inadequate reagent volume or improper dilution</li> </ul>	<ul style="list-style-type: none"> <li>• Briefly spin down vials before opening. Reconstitute the powder thoroughly.</li> <li>• Ensure sufficient incubation time including substrate incubation.</li> <li>• Check pipettes and ensure correct preparation.</li> </ul>
Large CV	<ul style="list-style-type: none"> <li>• Inaccurate pipetting and mixing</li> <li>• Improper standard/sample dilutions.</li> <li>• Air bubbles in wells.</li> </ul>	<ul style="list-style-type: none"> <li>• Check pipettes and ensure thorough mixing.</li> <li>• Use the correct dilution buffers</li> <li>• Remove bubbles in wells.</li> </ul>
High background	<ul style="list-style-type: none"> <li>• Plate is insufficiently washed.</li> <li>• Contaminated wash buffer</li> </ul>	<ul style="list-style-type: none"> <li>• Review the datasheet for proper wash. If using a plate washer, ensure that all ports are unobstructed.</li> <li>• Make fresh wash buffer</li> </ul>
No signal detected	<ul style="list-style-type: none"> <li>• The procedure was misconducted.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the step-by-step protocol was correctly followed and no misstep was conducted.</li> </ul>
Low sensitivity	<ul style="list-style-type: none"> <li>• Improper storage of the ELISA kit</li> <li>• Stop solution</li> </ul>	<ul style="list-style-type: none"> <li>• Store standards and detection antibody at -20°C after reconstitution, others at 4°C. Keep substrate protected from light.</li> <li>• Adding stop solution to each well before reading plate</li> </ul>