

Matrix metalloproteinase-2 (MMP-2) is known as 72 kDa type IV collagenase, and gelatinase A is an enzyme that in humans is encoded by the *MMP2* gene.(1) Proteins of the MMP family are involved in the breakdown of extracellular matrix in normal physiological processes, such as embryonic development, reproduction, and tissue remodeling, as well as in disease processes, such as arthritis and metastasis. Most MMP's are secreted as inactive proproteins which are activated when cleaved by extracellular proteinases. This gene encodes an enzyme which degrades type IV collagen, the major structural component of basement membranes. The enzyme plays a role in endometrial menstrual breakdown, regulation of vascularization and the inflammatory response.

Activation of MMP-2 requires a proteolytic processing. A complex of membrane type 1 MMP (MT1-MMP/MMP14) and tissue inhibitor of metalloproteinase 2 recruits pro-MMP 2 from extracellular milie to the cell surface. Activation then requires active molecule of MT1-MMP and auto catalytic cleavage. Clustering of integrin chain promotes activation of MMP-2. Another factor that will support the activation of MMP-2 is cell-cell clustering. A wild-type activated leukocyte cell adhesion molecule (ALCAM) also required to activate MMP-2. Mutations in the MMP2 gene are associated with Torg-Winchester syndrome, multicentric osteolysis and arthritis syndrome.(2) MMP2 has been shown to interact with THBS2,(3) TIMP2,(4-7) Thrombospondin 1,(4) CCL7 (8) and TIMP4.(6, 7)

Reference

- 1. Devarajan P, et al. J. Biol. Chem. 267 (35): 25228–32.
- 2. Martignetti JA, et al. Nat. Genet. 28 (3): 261–5.
- 3. Bein K, Simons M. J. Biol. Chem. 275 (41): 32167-73.
- 4. Morgunova E, et al. Proc. Natl. Acad. Sci. U.S.A. 99 (11): 7414–9.
- 5. Overall CM, et al. J. Biol. Chem. 275 (50): 39497–506.
- 6. Bigg HF, et al. J. Biol. Chem. 272 (24): 15496–500.
- 7. Kai HS, et al. J. Biol. Chem. 277 (50): 48696–707.
- 8. McQuibban GA, et al. Science 289 (5482): 1202-6.

PRINCIPLE OF THE ASSAY

This is a shorter ELISA assay that reduces time to 50% compared to the conventional method, and the entire assay only takes 3 hours. This assay employs the quantitative sandwich enzyme immunoassay technique and uses biotin-streptavidin chemistry to improve the performance of the assays. An antibody specific for MMP-2 has been pre-coated onto a microplate. Standards and samples are pipetted into the wells and any MMP-2 present is bound by the immobilized antibody. After washing away any unbound substances, a detection antibody specific for MMP-2 is added to the wells. Following wash to remove any unbound antibody reagent, a detection reagent is added. After intensive wash a substrate solution is added to the wells and color develops in proportion to the amount of MMP-2 bound in the initial step. The color development is stopped and the intensity of the color is measured.

This package insert must be read in its entirety before using this product.

Storage

Store at 4°C. The kit should be used in 6 months.



MATERIALS PROVIDED

Description	Quantity	Description	Quantity	Description	Quantity
Antibody Precoated Plate	1	20 x PBS	1	Substrate Solution	1
Detection Antibody	1	20 x Assay Buffer	1	Stop Solution	1
HRP Conjugate	1	96-well plate sheet	1	DataSheet/Manual	1
Standard	3				

Bring all reagents to room temperature before use.

Reagent Preparations

Equine MMP-2 Detection Antibody (1 vial)— The lyophilized Detection Antibody should be stored at 4°C to -20°C in a manual defrost freezer for up to 6 months, if not used immediately. Centrifuge for 1 min at 6000 x g to bring down the material prior to open the vial. The vial contains sufficient Detection Antibody for a 96-well plate. Add 200 µL of sterile 1 x PBS to the antibody vial. Vortex 20 sec and allow it to sit for 5 min prior to use. If the entire 96-well plate is used, take 200 µL of detection antibody to 10.5 mL of 1 x PBS to make working dilution of Detection Antibody and mix thoroughly prior to the assay. If a partial antibody is used store the rest at -20°C until use.

Equine MMP-2 Standard (3 vials) –Each lyophilized Equine MMP-2 Standard vial contains the standard sufficient for generating a standard curve. The unreconstituted standard can be stored at -20° C for up to 6 months if not used immediately. Centrifuge for 1 min at 6000 x g to bring down the material prior to open the vial. Add 500 µL of 1 x Assay Buffer to a standard vial to make a high standard of 20 ng/ml and vortex 20 sec and allow it to sit for 5 min prior to use. A seven-point standard curve is generated using 2-fold serial dilutions in 1 x Assay Buffer, vortex 20 sec for each of dilution step.

HRP Conjugate (55 μL) – Centrifuge for 1 min at 6000 x g to bring down the material prior to open the vial. The vial contains sufficient HRP Conjugate for one 96-well plate. If the volume is less than 55 µL, add sterile 1 x PBS to reach 55 µL and vortex briefly. Make 1:200 dilution in 1 x PBS. If the entire 96-well plate is used, add 53 µL of HRP Conjugate to 10.5 mL of 1 x PBS to make working dilution of HRP Conjugate and mix thoroughly prior to the assay. The rest of undiluted HRP Conjugate can be stored at 2 - 8°C for up to 6 months. DO NOT FREEZE

20 x PBS, pH 7.3, 25 mL-Dilute to 1 x PBS with deionized distilled water and mix well prior to use. 20 x Assay Buffer, 20 mL- Dilute to 1 x Assay Buffer with 1 x PBS prior to use. Substrate Solution, 10.5 mL. Stop Solution, 5.5 mL.



Assay Procedure

- 1. All procedures are conducted at room temperature (20-25 °C) and ensure equal **pipetting/dispensing** at each step and remove air bubbles in the wells for all steps.
- 2. Lift the plate cover and cover the unused wells or reseal the unused strips in the aluminum bag with desiccant at 4 °C. Vortex the standards and samples for 10 sec before applying to the plate. Add 100 µL of **sample** or **standard** per well and use duplicate wells for each standard or sample. Cover the 96-well plate and incubate on shaker at 450 rpm for 1 h (1.5 h if no shaking). Attention: MUST vortex standards and samples for 10 sec before pipetting to the wells!
- 3. Aspirate each well and wash with 300 µL of 1 x Assay Buffer for two times. Wash by filling each well with 1 x Assay Buffer using a multi-channel pipette, manifold dispenser, squirt bottle or auto-washer. Complete removal of liquid at each step is essential for good performance. After the last wash, remove any remaining Assay Buffer by aspirating or by inverting the plate and blotting it against clean paper towels.
- 4. Add 100 μL of the working dilution of Detection Antibody to each well. Cover the plate and incubate on shaker at 450rpm for 1 h (1.5 h if no shaking).
- 5. Repeat the aspiration/wash as in step 3.
- 6. Add 100 uL of the working dilution of HRP Conjugate to each well. Cover the plate and incubate for 20 minutes. Avoid placing the plate in direct light.
- 7. Repeat the aspiration/wash as in step 3 but wash 4 times instead.
- 8. Add 100 µL of **Substrate Solution** to each well and observe the color development every 1-2 mins. Incubate for up to 30 minutes (depending on signal. Stop the reaction when it turns to dark blue in the highest standard wells). Over-incubation of the substrate will result in overflow of high standard and should be avoided. Avoid placing the plate in direct light.
- 9. When it gets to dark blue in the highest concentration of standard wells, add 50 μ L of **Stop Solution** to each well to stop the reaction. Gently tap the plate to ensure thorough mixing. **Ensure** all wells turn yellow by pipette tip prior to measurement.
- 10. Determine the optical density of each well immediately, using a validated microplate reader set to 450 nm. If wavelength correction is available, set to 540 nm or 570 nm. If wavelength correction is not available, subtract readings at 540 nm or 570 nm from the readings at 450 nm. This subtraction will correct for optical imperfections in the plate. Readings made directly at 450 nm without correction may be higher and less accurate.

Sample dilution: If high density is expected, samples should be diluted with equal volume of 1 x Assay Buffer and vortex for 1 min prior to assay. If the OD value still exceeds the upper limit of the standard curve, further dilution is recommended till it falls in the detection range and the dilution factor must be used for calculation of the concentration.

Precaution and Technical Notes

- 1. It is critical to follow the procedure step by step otherwise appropriate color development may not occur as expected and make sure no air bubbles in wells before adding reagents.
- 2. A standard curve should be generated for each set of samples assayed. Thorough mixing of standards at each of dilution steps is critical to acquire a normal standard curve and vortex again (10 sec) before pipetting to the 96-well plate.
- 3. HRP Conjugate contains enzyme, DO NOT mass up with Detection Antibody.
- The Stop Solution is an acid solution, handle with caution.
- 5. This kit should not be used beyond the expiration date on the label.
- 6. A thorough and consistent wash technique is essential for proper assay performance.
- 7. Use a fresh reagent reservoir and pipette tips for each step.
- 8. It is recommended that all standards and samples be assayed in duplicate.
- 9. Avoid microbial contamination of reagents and buffers. This may interfere with the performance of the assay.




Calculation of Results

Average the duplicate readings for each standard, control, and sample and subtract the average zero (blank) standard optical density. Create a standard curve by reducing the data using computer software capable of generating a four-parameter logistic (4-PL) curve-fit. As an alternative, construct a standard curve by plotting the mean absorbance for each standard on the y-axis against the concentration on the x-axis and draw a best fit curve through the points on the graph. The data may be linearized by plotting the log of the MMP-2 concentrations versus the log of the O.D. and the best fit line can be determined by regression analysis. This procedure will produce an adequate but less precise fit of the data. If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.

The Standard Curve

The graph below represents typical data generated when using this equine MMP-2 ELISA Kit. The correlation coefficient (r^2) is 0.995-1.000. The standard curve should be calculated using a computer generated 4-PL curve-fit to determine concentrations of unknow specimens.

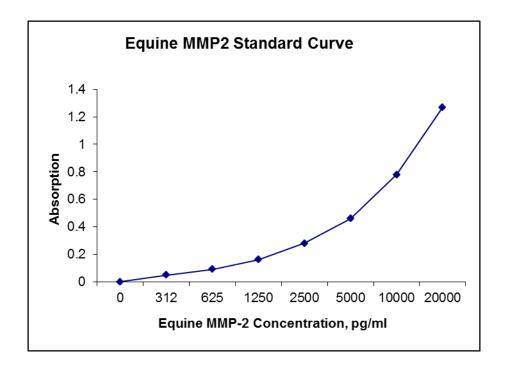



Specificity

The following recombinant equine proteins prepared at 10 ng/ml were tested and exhibited no cross-reactivity or interference.

BMP4, HGF, IL-1β, IFN-γ, TGFβ1, TLR3, TNF-α, VEGF

Detection Range

312-20000 pg/ml

Assay Sensitivity

60 pg/ml

Assav Precision

Intra-Assay %CV: 5; Inter-Assay %CV: 9

Related products

- 1. GR239031 96-well microplate sealer plastic, pack of 100, \$94
- 2. GR238016 50 ml Reagent Reservoir, Pack of 200, \$148
- 3. GR238002 Microplate 12x8-Well Strip High Binding, Case of 50, \$399
- 4. GR238003 Microplate 12x8-Well Strip Medium Binding, Case of 50, \$275
- 5. GR238032 Costar Stripwell Microplate 1x8 well, Flat Bottom, No Lid, High Binding, Case of 100, \$899
- 6. GR238001 468667 Thermo Microplate 12x8-Well Strip Nunc Maxixorp F8, Case of 60, \$616
- 7. GR238004 Tissue Culture 96-well Microplate, Case of 50, \$275

DECLARATION

THIS REAGENT IS FOR IN VITRO LABORATORY TESTING AND RESEARCH USE ONLY. DO NOT USE IT FOR CLINICAL DIAGNOSTICS. DO NOT USE OR INJECT IT IN HUMANS AND ANIMALS.

FOR LABORATORY RESEARCH USE ONLY NOT FOR USE IN FELINES AND ANIMALS



Troubleshooting Guide

	Troubleshooting Guide				
Problem	Possible causes	Solution			
Poor standard curve	 Inaccurate pipetting Insufficient vortexing OD₄₅₀ too high for the high standard point Air bubbles in wells. Standard defect or not fully recovered 	 Check pipette calibration and ensure equal dispensing. Vortex 30 sec for each of standard dilution steps and vortex again (10 sec) before pipetting to the 96-well plate. Reduce substrate incubation time Remove air bubbles in wells by pipette tip. Change a standard vial or spin down the vial before reconstitution 			
Low signal	 Improper preparation of reagents and storage Too brief incubation times Inadequate reagent volume or improper dilution Standard defect and sample overdiluted 	 Briefly spin down vials before opening. Reconstitute the content thoroughly. Proper storage of plate and strip and detection antibody after first usage as shown in the datasheet. Microplate shaker may improve signals. Ensure sufficient incubation time including substrate incubation. Increase sample incubation to 2 hours. Change a Standard vial. Undilute sample or less dilution 			
Overflow in the standards	Substrate incubation too longAir bubbles in wells	 Observe the color development every 1-2 mins and reduce substrate incubation time. Stop the reaction by adding 50 µl of Stop Solution when it turns to dark blue in the highest concentration of standard wells. 			
Large CV	 Inaccurate pipetting and mixing Improper standard/sample dilutions. Air bubbles in wells. Microplate reader out of calibration It did not turn yellow after adding 	 Remove air bubbles in wells Check pipettes and ensure the pipette is calibrated properly. Ensure accurate pipetting and thorough mixing. Use reverse, instead of forward pipetting. Use the correct dilution buffers Remove air bubbles in wells by pipette tip. Calibrate the microplate reader properly If it did not turn yellow after adding Stop Solution, mix with 			
High background	 Stop Solution Reagent reservoir issue Plate is insufficiently washed and air bubbles in wells. Contaminated Assay Buffer Pipet tip contaminated 	 pipette tip till it turns yellow prior to measurement. Use a new reagent reservoir for Substrate Solution. Increase wash to 4 times before adding substrate and ensure plate washer functions normally. Remove air bubbles in wells by pipette tip. Use squirt bottle for washing. Make fresh Assay Buffer and wash thoroughly. Use new pipette tips for blank wells. 			
No signal detected	 The procedure was misconducted. Failures of spin down the contents in Detection Antibody and Standards. Failure of Substrate or HRP Samples overdiluted 	 Ensure the step-by-step protocol. Spin vials of Detection antibody and Standard to completely recover the content. Mix 100 μl of Substrate with 0.5 μl HRP and dark blue color should develop in 5 min. Try a new standard vial and use positive control. Try not dilute samples 			
Low sensitivity	 Improper dilutions of standards Improper storage of the ELISA kit 	 Ensure accurate and thorough dilutions of standards at each step. Store detection antibody at -20°C after reconstitution and others at 4°C. Keep substrate solution protected from light. 			